

Radio Controlled Extension Lead

4 individually controlled sockets

- **Radio controlled extension lead** with controller for use with domestic appliances.
- Conveniently switch off appliances to reduce Standby usage and save money
- The remote control does not require direct line-of-sight to operate. It can work even when the socket is hidden behind furniture or in an adjacent room.
- Individual 4 channel remote control with all On/Off buttons.
- Dual controller option, a socket can now be controlled by two remote controllers
- 13 Amp rated sockets to BS5733, indoor use only.



Setting up-- Learning remote controller key codes

1. Remove the battery protective tag from the hand controller - the battery is preinstalled.
2. Insert the plug into a mains wall socket and switch the wall socket on. The red indicator light near the ON/OFF button should flash at 1 second intervals indicating it is ready to learn a key code from the hand controller.

If the light is not flashing, ensure the socket is off, then press and hold the green button on the front of the socket for 6 seconds or so until it starts to flash at 1 second intervals.

3. Point the hand controller at the device and press and hold briefly any one of the buttons. The red indicator light on the extension lead will flash quickly and then turn off to indicate the extension lead was successfully programmed.
4. Simply plug the appliances you want to control into the sockets and you can use the hand controller button pairs to control the sockets.

Using the hand controller to switch the sockets

- Use the remote controller numbered button pairs to switch the required socket ON or OFF
- Use the ALL button pair to switch all sockets ON or OFF at the same time.

Using the green button on the housing to switch the sockets

- Press the Green ON/OFF button on the extension lead housing:
 - If there are any sockets that are ON, pressing the green button once will turn all sockets OFF.
 - If all sockets are Off, pressing the green button once will turn all sockets ON.

Add a new hand controller

The socket can remember upto 2 hand controllers. Put the socket into learning mode again as indicated in the Setting-up procedure-2 and follow the same procedure-3/4 for the new hand controller.

Factory Reset

The device memory can be erased by factory reset:

1. Turn the device OFF
2. Press and hold the Green button on the extension lead until the LED light flashes quickly - the Red LED light will flash at 1 second intervals first then flash quickly indicating a full reset.



Television



DVDplayer



Settop box



Games console



Printer



PC monitor

Technical Data

General:

Radio Frequency: 433.92Mhz
Range: Ca. 25 metres in open area

Remote controller:

4 separate channels + all ON/OFF
Battery: replaceable 3V CR2032
Transmission indicator lamp: red=ON
Data protocol: simplex one way
Transmitter output: 3V/+12 dBm/27 mA
Product Code: ENER002-C

Extension Lead:

Rating: 240V~ 50Hz, 13A, 3kW max.
Power consumption in standby: < 0.5W
Mains cable length: 1.8 Meter
Number of sockets: 4
Socket LED: red = ON, off = OFF
Socket button:

- Single press to toggle power ON/OFF
- Long press for 6 seconds: learning mode (slow flash)
- Long press > 6 seconds: factory reset (fast flash)

 Product Code: ENER010

Applications: Domestic appliances with a standard UK plug. Indoor use only

Dual Controller Option

The extension lead can be controlled by two remote controllers. Additional remote controllers can be purchased through our website.

When an attempt is made to link a third controller with a socket, it will automatically overwrite the memory of the first controller.

